


Pellet Pro® Vertical Pellet Smoker

Installation Manual



1. Remove all parts from the inside of the smoker and remove all cellophane.
2. Flip the smoker on its back side and attach the four casters to the bottom corners of the smoker using the smaller bolts provided. It is optional to attach the swiveling casters on the left or right side.
3. Once the casters are attached to the bottom of the smoker, flip the smoker upright.
4. Carefully insert the hopper assembly into the left side of the smoker and connect the RTD Probe wires with the black plastic connector. Once the hopper is against the smoker, use the (4) M6 Bolts and washers to secure the hopper assembly from the inside of the smoker. Tighten down the bolts with the wrench provided and carefully flip the smoker onto the right side so that the hopper is facing upward. Remove the bottom perforated plate on the hopper using a Philips head screwdriver in order to access the wiring bundle.
5. Feed the RTD temperature probe wire from the smoker into the hopper assembly hole close to the wall of the smoker. The wire should end up in the inside of the hopper housing where the components are located. Use a wire tie to bundle the wires in order to take up the wire slack and re-attach the bottom perforated plate. Be sure the wiring is not interfering with fan blades on the components.
6. Carefully flip smoker upright.

7. Attach the three temperature gauges to the door. Be sure to tighten only finger tight.
8. Remove the bolts and washers that are attached to the door handle and side handle. Using the separate longer bolts and washers provided, attach the door handle and side handle to the cabinet.
9. Install the Heat Diffuser, Drip Pan, and Hopper Safety Guard as shown below.

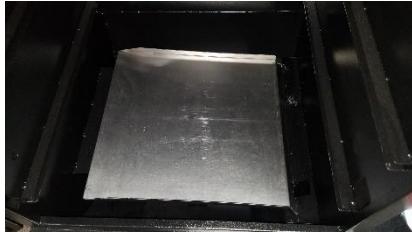

9. Attach the side vent and dampener as shown using the (6) bolts that are already threaded into the side wall.
10. Install all four stainless steel racks.
11. Wipe down the racks and inside of the smoker with vegetable oil to season it.

****The Caution sticker on the hopper assembly can be removed if desired.****



12. Attach the yellow ground wire to the bottom of the cabinet using the Phillips head screw and tuck in any remaining wire to the inside of the hopper assembly.

Circulation Fan

When mounting the circulation fan, remove the fan housing and attach the fan to the top corner of the cabinet using the four screws provided. Once mounted, re-attach the housing.

Install fan onto the end of the shaft and secure with the REVERSE THREAD nut.

